

# 9450 User Guide



## Compatible Equipment

9040

Internal Sounder

## User Commands

Set/Unset System	User code
Omit zone/Part Set	User code + 2 + Omit and/or 3 + Omit
Test Bells	4 + ENTER + User code The system activates the internal sounder for three seconds, followed by the external sounder for three seconds.
Walk Test	5 + ENTER + User code Key in User code to end test
Change User code	6 + ENTER + current user code new user code + ENTER