

Introduction

Congratulations on your purchase of the **WisDom** - RISCO Group's Wireless Security System. The WisDom has been specifically designed to meet a wide range of security needs for many residential and small commercial applications. To make the most of your system we advise you to take some time to read through this easy user guide and also the accompanying user manual.

Wireless Devices

To ease your installation, all devices have already been pre-programmed into the system. The ID of each device is marked with a sticker on the device plastic and on the package. Devices in the kit include:

3 Magnetic Contacts

- Defined as zones 1,2 and 4
- Default application:
 - Zone 1 :Front door (Exit/entry)
 - Zone 2: Back door (Instant)
 - Zone 4: Garage door (Exit/entry)

 


1 PIR/Pet Detector

- Defined as Zone 3
- Default application: Living room.
- Zone type: Interior + Entry Follower



 
2 Wireless Key Fobs

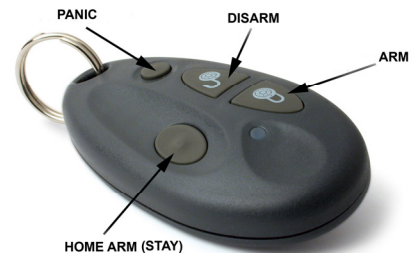

Note: The buttons on the wireless key fob are sensitive to avoid false alarms, please handle the fobs with care

Note: Remove the batteries from their plastic insulation. Replace them into the battery compartment and fit the lid.

WisDom LED Indication

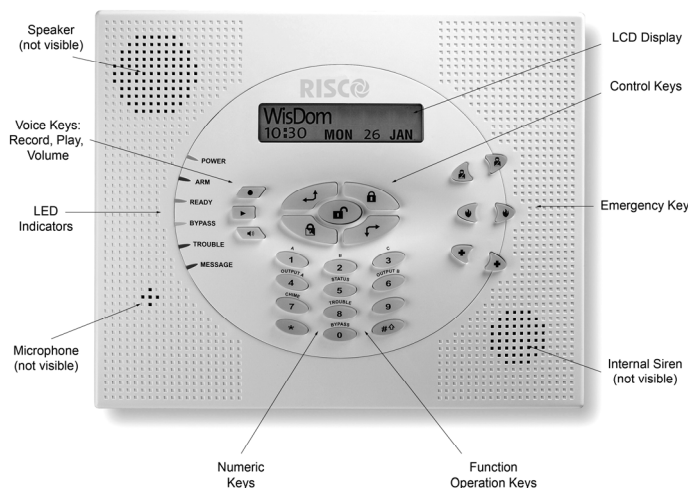

LED	Description
POWER	On: Power OK Off: No power Rapid Flash: AC trouble Slow flash: Battery trouble
ARM	On: Full/Partial Arm Off: System fully disarmed Rapid Flash: Alarm
READY	On: System ready to arm Off: System not ready to arm Slow flash: Ready to arm with door open
BYPASS	On: Home arming or Bypassed zones available Off: No bypassed zones
TROUBLE *	Rapid Flash: Trouble in the system Off: No trouble
MESSAGE	Slow flash: Listen in mode Rapid flash: Talk mode or New message Off: No new message

* To see system troubles press **#*#** [8] [Grand Master Code]
#*# (Default code 1234)

User Commands

Full Arming (Leaving the Premises)



[Enter code] > [Press ] > [Exit door]



Press 

Panic Alarm



Press   simultaneously



Press small blank button

Home Arming (Arming while remaining inside)




[Enter code] > [Press ] > [Exit door]



Press the large blank button

Full Disarm or Silence an Alarm






[Enter code] > [Press ]


 
 
 
 


Press 

 

Edit User Codes (Adding, changing or deleting a user code)

1. Press [] [5] [Grand Master Code][] [1][1]
2. Enter a two digit USER ID number (00 to 32), then press .

Note: Grand Master code is always (00) user ID.

3. Enter a code number for this chosen user and press .
4. Press     to return to normal display.

Define Follow-Me Destination (Phone, Email or SMS to send report)

1. Press [] [2] [2] [1] [Grand Master code][]
2. Enter information according to display messages

Remote Phone Operation

Receiving a call from the system

1. Pick up the phone and say "Hello". You will hear an event announcement message.
2. Choose an option from the **Acknowledge** menu:

Acknowledge message	[1]
Acknowledge and stop all dialling	[2] [User Code] [#]
Access Operations menu (if defined)	[3] [User Code] [#]
Access Operations menu (if defined)	[3] [User Code] [#]
Listen In (if defined)	[6] [1]
Talk (if defined) –	[6] [2]
Repeat the event message	[#]
Repeat the Acknowledge menu	[*]

Final System Installation

The WisDom's wireless devices are already pre-programmed into the system therefore all that remains to complete installation is to connect the power and telephone line to the system. For more information on connecting the power and telephone line, adding additional wireless devices or setting up different programming options please refer to the **Easy Programming Set up guide** or contact your supplier.




Calling the system

1. Dial the number of the premises

If an answering machine is present at the premises: Let the line ring once, hang up and call again.

If an answering machine is not in use at the premises:

Wait until the system picks up. You will hear a consecutive tone.

2. Enter the 2 digit remote access code.
3. Enter your user code followed by .
4. Choose an option from the **Operations** menu:

Arming all partitions	[1][1]
Arming by partition	[1][9] [PARTITION NO.]
Arming all partitions	[2][2]
Disarming by partition	[2] 9][PARTITION NO.]
Changing zone Bypass Status	[3][ZONE NO.][#][9]
Operating utility outputs	[4][UTILITY OUTPUT NO.]
Changing FM numbers	[5][FM NO.][#][2][NEW PHONE NO.][#] 1]
Listening In	[6][1]
Talking	[6][2]
Playing a message	[7][1]
Recording a message	[7][2]
Exiting the system	[0]
Repeat the menu	[#]
Return to previous menu	[*]